




austex
COMMERCIAL
FABRICS



SNOW

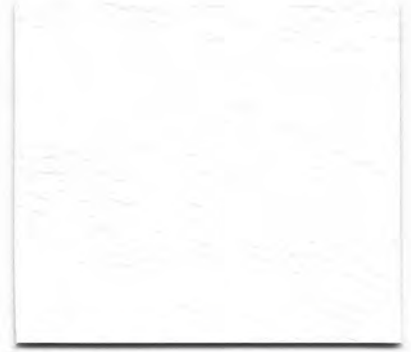

COCONUT



ALMOND



NOUGAT




CHALK




SAND



TOBACCO

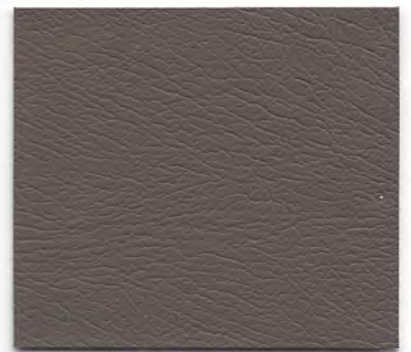

BRAZIL

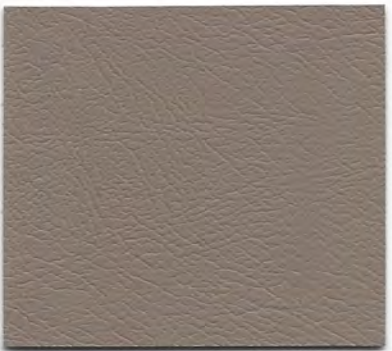


CLAY




MAPLE



BARK

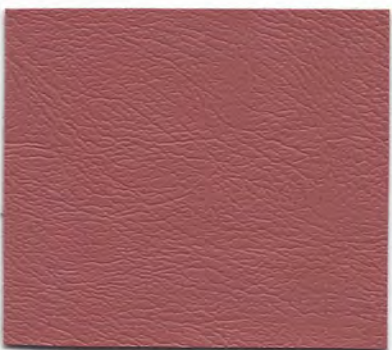

CAMEO

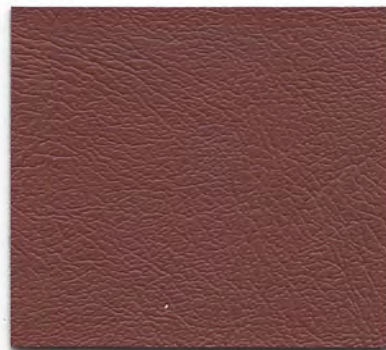

CEDAR



COFFEE BEAN



LEMON TWIST



CARNIVAL



SORBET




CITRONELLE




LIME



TANGERINE

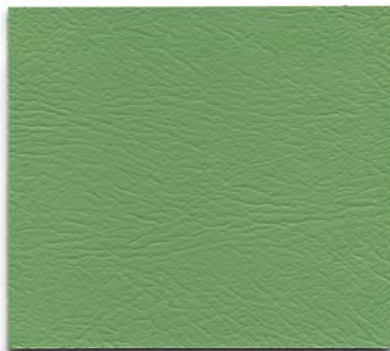


GRASS HOPPER

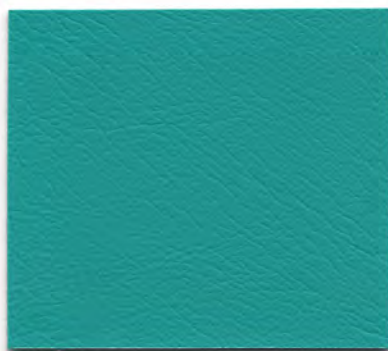

EMERALD



FLAME

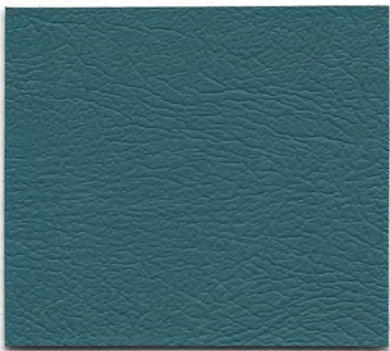

SEAGRASS




CACTUS



PAPRIKA



FOREST

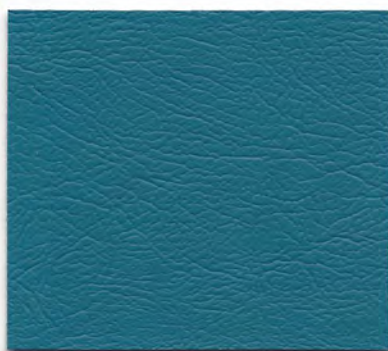

CARIBBEAN



RHUBARB



MINK



LIPSTICK



PRIMROSE



LILAC



PLUM



REGAL



RUBY



PORT



EGGPLANT





ICEBURG




PERIWINKLE



ATLANTIC



LAGOON

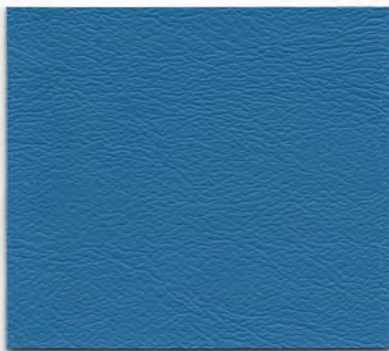

GALAXY



WINDSOR



STEEL



WEDGEWOOD



NAVY



PEWTER



CHARCOAL



BLACK



SHELL



SMOKE

studio *Encore* commercial upholstery fabric

specifications

composition 85% PVC 15% Polyester
Gauge: 1.0mm Roll length: 30m Roll Width: 137cm

abrasion resistance Test method AS2001.2.25 (12kPa)
Martindale method. No significant wear after 100,000+ rubs.

meets F.R. standards for use in commercial areas
F.R. properties: Tested to Australian Standards (AS 1530.3)
Spread of flame: 0 Smoke developed: 5
I.M.O. Standards A. 652 (16)
F.A.S. - 25.853 *Fire test certificates available upon request

anti-microbial & anti-bacterial Sanitised to inhibit growth of bacteria, mould & mildew.

ezyclean® Ezyclean® technology is a ground-breaking feature that offers the highest level of stain resistance. Ezyclean® will ensure the easy removal of tough stains using alcohol or bleach solutions. No damage will occur to the appearance of the vinyl even after repeated cleaning, making it the only choice for healthcare and commercial applications.

colour fastness Studio *Encore* is suitable for indoor and outdoor use.
Light fastness rating 6-7. ISO 105-B02-1994 (Grey scale 1-5)

colour fastness to bleach Tested to Australian Standards (AS 2001.4.11).
No change of colour rating 4-5

usage Suitable for heavy commercial upholstery, marine, healthcare & screens.

care & maintenance Most stains can be cleaned using warm soapy water, followed by clean water rinsing. Moderate scrubbing with a medium bristle brush will help loosen soiling from the embossed surface. Failure to follow cleaning instructions may permanently stain and reduce the life of the vinyl.
For further cleaning information, please contact Austex Fabrics for a product cleaning guide.



All Austex products are designed and manufactured in accordance with the quality assurance system ISO 9001.



Manufactured by

AUSTEX INDUSTRIAL FABRICS
ABN 68 371 460 789
Head Office 32-34 Oakover Rd.
Preston Vic. 3072 Australia.
Ph:(61 3) 9484 9744
Fax:(61 3) 9484 9747
sales@austexfabrics.com.au
www.austexfabrics.com.au

